Installation and Assembly - Self Leveling VCR Hanger

Model: ACC 906

Before you start check the parts list below to make sure all of the parts shown are included.

IMPORTANT! **Read entire instruction sheet before you start installation and assembly.**

Parts List

	Description	Qty.	Part Number
AA	jumbo vcr tilt mount	**1**	081-1046
BB	vcr tilt mounting plate	**1**	081-1047
CC	M5 x .8 x 8mm socket pin screw	**10**	520-1062
DD	1/4 washer	**2**	540-9444
EE	1/4 lock washer	**2**	540-9402
FF	4mm security tool	**1**	560-9646

Note: Actual parts may appear slightly different than illustrated.

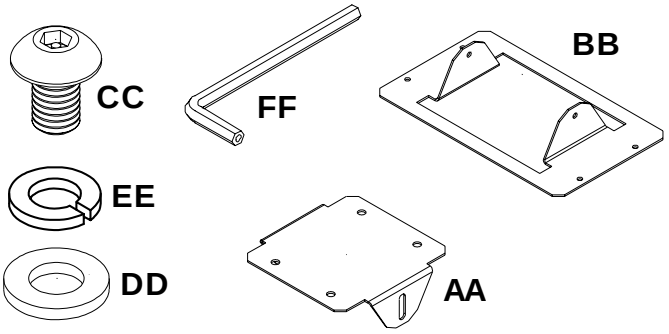

1 The hanger bracket will be used in place of what was supplied with the VCR mount. The TV does not have to be removed for you to install your VCR mount. Attach (**AA**) to tray using four screws (**CC**). Attach (**BB**) to VCR bracket using four screws (**CC**). Attach (**BB**) to (**AA**) using two sets of (**CC**, **EE** & **DD**). Tighten all fasteners with security tool (**FF**).

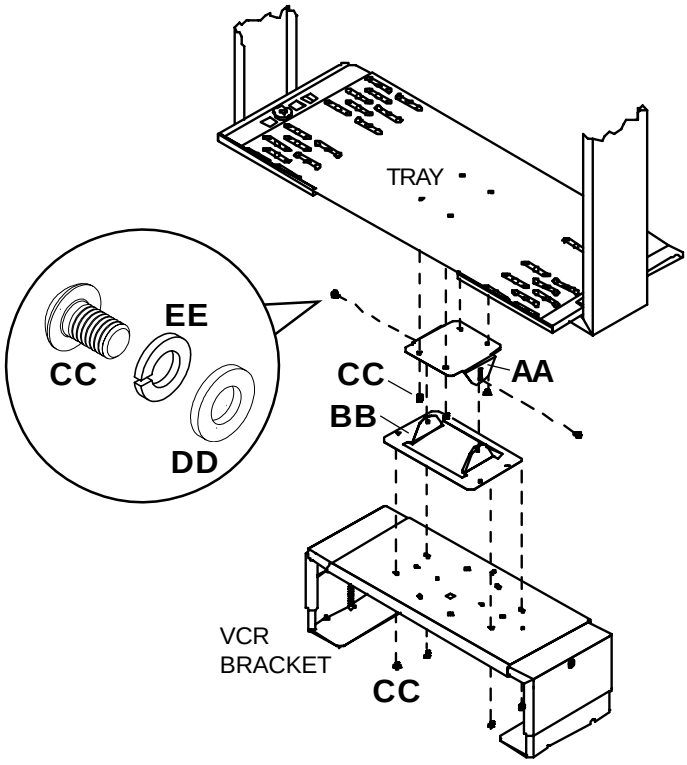

Visit the Peerless Web Site at www.peerlessindustries.com For customer service call 1-800-729-0307 or 708-865-8870.

© 2001 Peerless Industries, Inc. All rights reserved.
Peerless is a trademark of Peerless Industries, Inc.